
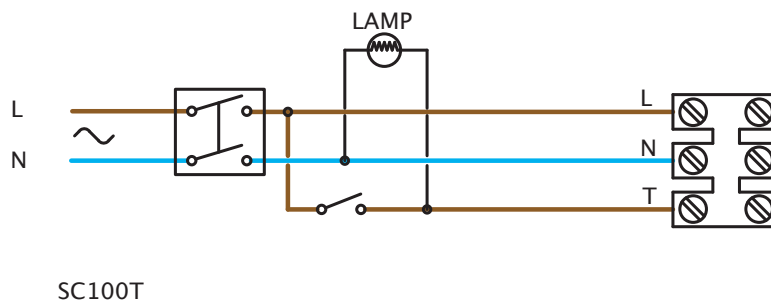
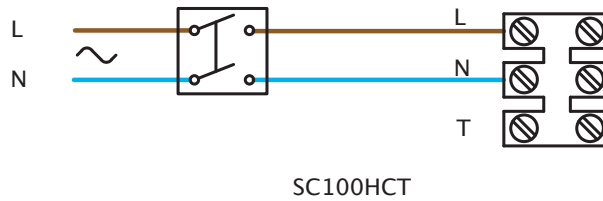
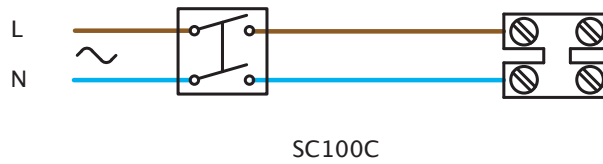


Wiring Diagrams

CENTRIFUGAL SC 220V-240V SINGLE PHASE

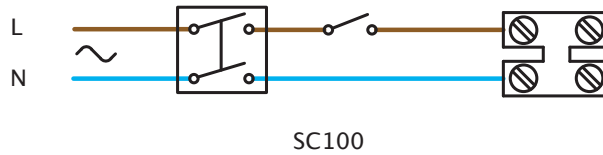

(THIS MODEL CAN BE WIRED FOR REMOTE SWITCHING,
ENSURE PULL CORD SWITCH IS IN OFF POSITION & REMOVE CORD)